


# ONELINK™ SHELTER SYSTEM SET UP

CAREFULLY FOLLOW ALL SET UP INSTRUCTIONS. CHECK INDIVIDUAL PRODUCT LABELS FOR MORE INFORMATION.


- 1 SUSPENSION:** Find two living, mature trees approx. 10-14 feet (3-4 meters) apart that can safely support the hammock and its occupants. Loop straps around trees at least 5 feet (1.5 meters) from the ground threading the multi-adjustment end through the end with the single loop.

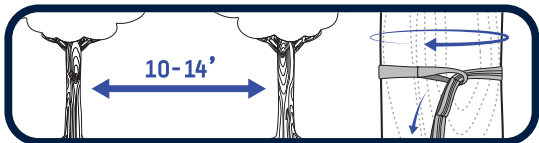


- 2 HAMMOCK:** Attach carabiners to straps making sure each carabiner clicks closed and visually check that the gates are closed before use. Gently lower yourself into the hammock to determine if adjustments are needed to achieve a hanging height of 18" (45cm) or less.



- 3 BUG NET:** Tie the included bug net ridgeline cord to your suspension system or around the same stable anchor points your hammock is attached to. Pass your hammock through both open ends of the bug net and secure each end closed. Attach clips on top of bug net to the ridgeline.

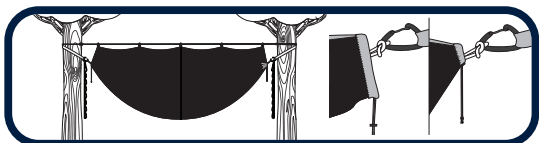

- 4 RAIN TARP:** Tie the ridgeline cord around the same stable anchor points your hammock is attached to and tension the ridgeline with the LineLoc adjusters. Use stakes to secure the tarp's guylines to the ground and tension with the LineLoc adjusters located on each corner.

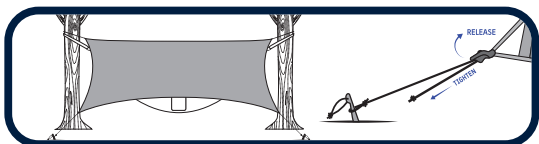

# ACCIDENTS HAPPEN

- Never hang your hammock higher than 18-inches off the ground.
- Always make sure to check the area beneath the hammock is free of sharp objects, rocks, trash, and any other debris that could create a hazard in the case of a fall.
- Before every use, fully inspect your hammock - including carabiners and rope and your suspension system to check for snags, fraying, and general wear and tear in addition to anything unusual and/or different from the time of purchase. If anything suspect is found during inspection, please discontinue use.
- Do not permit children to use unattended.
- Do not jump or swing aggressively in hammock.
- Always follow provided instructions.
- Always test the hammock before putting your full weight into it.
- Do not stack hammocks vertically.
- Do not modify, after market modifications will void your warranty.
- Do not untie hammock knots (found at the ends of the hammock).

FOR MORE INFORMATION VISIT [ENONATION.COM/SAFETY](http://ENONATION.COM/SAFETY)

# PRODUCT CARE

With proper care, your hammock will provide countless hours of relaxation.

- Keep it out of direct UV light when not in use and store dry in a cool place.
- Never leave your hammock unattended.
- Prevent damage by removing sharp items in pockets and debris from shoes.
- Hammocks are flammable; keep away from open flames and embers.
- Get it dirty? Remove the carabiners and hand wash in cold water using a mild detergent. Hang dry and you're back in the game!

FOR MORE INFORMATION VISIT [ENONATION.COM/CARE](http://ENONATION.COM/CARE)

# WARRANTY

ENO warrants our product to be in good condition upon receipt and free from manufacturing defects for a period of 2-years from the original date of purchase.

This warranty only covers manufacturing defects and does not cover:

- UV Damage (discoloration and brittleness causes tearing)
- Elemental/Accidental Damage (wind, burns, animal bites)
- Improper care or use (hanging over 18", jumping, swinging)
- Normal wear and tear
- After-market design modifications

FOR MORE INFORMATION VISIT [ENONATION.COM/WARRANTY](http://ENONATION.COM/WARRANTY)

It truly means the world to us that you have chosen to make ENO part of your life. Welcome to the family! The highest compliment we could possibly receive is for you to tell your friends about us. If you enjoy these ENO products as much as we do, then please consider spreading the hammock word.

Keep exploring, adventuring and relaxing...we hope to see you around!

Yours in hammocks,



Peter Pinholster



E-Q1